

## Introduction

### What is it

The Marine Watch Broadcast is an add-on to the Marine Watch S Series alarm system.

It adds the capability to send SMS and email messages to up to three cell phones and three email addresses.

The box size is 300 x 300 x 210 mm.

### SIM card

The system requires a customer-provided SIM card, with the correct network.

The system is designed to work on either a European network or the American Verizon or AT&T networks, as specified when ordering.

- Router P/N 2702531 – Europe
- Router P/N 2702532 – Verizon
- Router P/N 2702533 – AT&T

**Note!** Using a non-matched SIM card will not work.

### More information

For the latest updated information, please contact your local distributor or visit the Marine Watch section of the Auto-Maskin website.

### Support

- Europe: support@auto-maskin.com
- Americas: support.us@auto-maskin.com

## Log into the PLC

### Prepare your laptop

Set a static IP address on your laptop network port. Using e.g. the address 192.168.0.25 for the laptop should not conflict with any other assigned addresses.

**Note!** The Marine Watch S Series alarm system uses an IP address range of 192.168.0.XXX.

### Connect the cable

Connect an Ethernet cable between your laptop network port to any available port on the Ethernet switch.

### Log in

Then, open a browser and type in 192.168.0.112. You will be prompted for a user name and password.

- The user name is **admin**
- The password can be found on the PLC



**Note!** Find the word **Password** on the top of the PLC, and the actual password is written underneath.

auto  
MASKIN

Marine Watch

# Quick Installation Guide

## Marine Watch Broadcast

P/N 2500230



### Highlights

- Easy installation, with Ethernet cable communication to the Marine Watch I/O Cabinet
- Send an SMS text message and/or email to several receivers if an event occurs
- Power On/Off switch
- LED lamp indicates a connection to the GSM network
- IP56 rated enclosure
- External antenna with 5-meter cable
- Local configuration requires no special tool

## Main Configuration Page

Once logged in, the following web server page is displayed.

### Configuration of SMS / e-mail dispatcher

S-ONE IP-address:

### TC ROUTER

IP-address:

Socket server port:

### E-Mail configuration

DNS server IP-address:

SMTP server URL:

SMTP server port:

Send from e-mail address:

Login User:

Login Password:

SMTP Diag:

### Contact configuration

### Alarm configuration

Channel 1 - 15

Channel 16 - 30

Channel 31 - 45

Channel 46 - 60

Channel 61 - 75

Channel 76 - 90

Channel 91 - 105

Channel 106 - 120

### Email configuration

This section must be configured by the customer for the outgoing email service to work.

**Note!** The default email settings are just an example and will not work to send alerts.

### Save the configuration

All configurations are saved in the PLC immediately. Unplug the cable when finished.

### Responsibilities

It is the sole responsibility of the installer to ensure that the installation work is carried out in a satisfactory manner and meets all applicable rules and regulations.

## Contact Configuration

### SMS and email configuration

From the Main Configuration page, select Contact configuration.

Type the phone/SMS number and email addresses to the receivers.

### Configuration of contacts

Back

- |   |  |       |   |        |   |
|---|--|-------|---|--------|---|
| 1 | <input checked="" type="checkbox"/> Enable | Phone | <input type="text" value="1234567890"/> | E-Mail | <input type="text" value="youremail@yourdomain.com"/> |
| 2 | <input type="checkbox"/> Enable            | Phone | <input type="text"/>                    | E-Mail | <input type="text"/>                                  |
| 3 | <input type="checkbox"/> Enable            | Phone | <input type="text"/>                    | E-Mail | <input type="text"/>                                  |

There are three possible SMS numbers and three possible email receiver addresses. Enable the one(s) that are to be used.

### Note

Auto-Maskin continuously upgrades its products and reserves the right to make changes and improvements without prior notice.

## Channel Configuration

### Channel configuration

From the Main Configuration page, select a Channel page to configure, e.g. Channel 1 - 15.

For each channel, type the text that the receiver of the event shall see.

### Configuration of alarms

Back

Channel 1	Text	<input type="text" value="FWD Bilge Hi LVL"/>	Modbus register	<input type="text" value="10008"/>
Channel 2	Text	<input type="text" value="PORT Bilge Hi LVL"/>	Modbus register	<input type="text" value="0"/>
Channel 3	Text	<input type="text" value="STBD Bilge Hi LVL"/>	Modbus register	<input type="text" value="0"/>
Channel 4	Text	<input type="text" value="AFT PORT Bilge Hi LVL"/>	Modbus register	<input type="text" value="10035"/>
Channel 5	Text	<input type="text" value="AFT STBD Bilge Hi LVL"/>	Modbus register	<input type="text" value="0"/>

### Modbus register

The Modbus register shall match the channel in use in the Marine Watch S Series configuration.

For a list of channel Modbus addresses please see this URL: <https://tinyurl.com/2p95s78b>

For unused channels, the Modbus address shall be 0.

### Additional Documentation

Please visit the Auto-Maskin website <http://www.auto-maskin.com> for additional documentation.