


-

The basic harness kit P/N 1006946 is necessary to complete the installation and must be ordered separately.

Clear indication with sound
and flashing objects.

Lube Oil Pressure

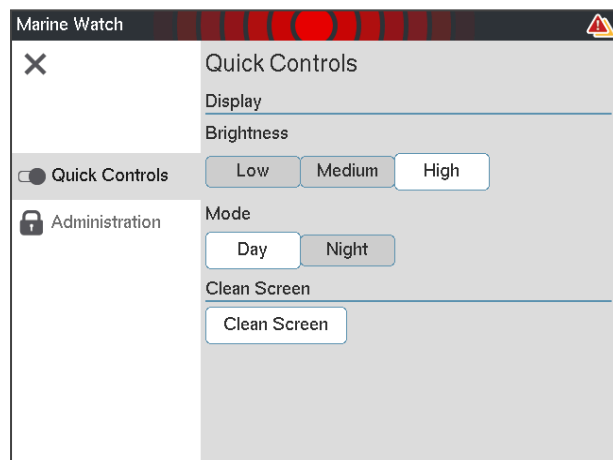


The **Home** button toggles between the menu and alarm list.



Copyright © Auto-Maskin



S-ACE Annunciator Panel P/N 1500075

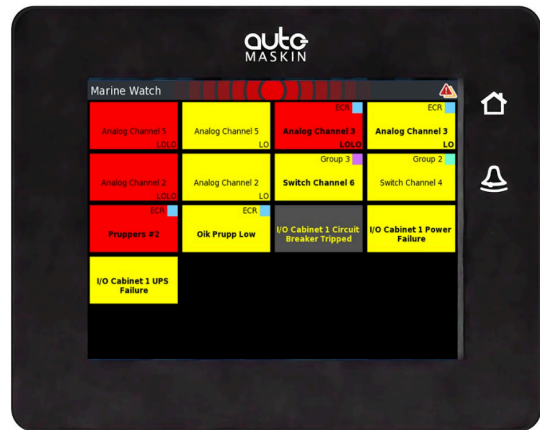

Highlights

- Great overview on the 5.7" colour touch-screen
- Self-configuring over the Ethernet cable
- No extra configuration tool or expertise is required
- Easy mechanical installation
- IP66/56 rated
- Attracts attention with sound and flashing objects
- User-friendly menu and easily understood interface
- Multiple panels can be installed in a standard Ethernet network

- Great overview on the 5.7" colour touch-screen
- Self-configuring over the Ethernet cable
- No extra configuration tool or expertise is required
- Easy mechanical installation
- IP66/56 rated
- Attracts attention with sound and flashing objects
- User-friendly menu and easily understood interface
- Multiple panels can be installed in a standard Ethernet network

Specifications

Measurements

Section	Width	Height	Depth	Unit
Size overall	162	130	67	mm
Cut-out	155	123	90	mm

Power Ratings

Section	Min.	Typ.	Max.	Unit
Power Supply	8	12/24	32	VDC
	-	0.4	-	A

Rear Side Connectors



C1	C2	C3	C4
Power	Not In use	Not In use	Not In use

Responsibilities

It is the sole responsibility of the installer to ensure that the installation work is carried out in a satisfactory manner and meet all applicable rules and regulations.

Installation

1. Remove the unit from the ESD Bag. Use the submitted mounting frame and fastening material to install the panel in a suitable enclosure.
2. Make sure the power ratings are correct and then plug the Deutsch™ DT12 connector into C1.
3. Connect the Ethernet cable, and seal the cable with the RJ45 connector kit.
4. To ensure IP-rating, fit the sealed DT12-connectors to C2, C3, and C4.

Configuration


The S-ACE Annunciator Panel needs the IP address of the S-ONE Alarm Panel selected as type Main Panel.

1. Power up the S-ACE Panel.
2. Toggle the **Home** button to see the menu.
3. In the menu, select **Administration**.
4. In the Administration section, press the **Log In** button, and type the default PIN-code, **1234**.
5. In the Administration menu select the **Main Panel**. See the screenshot on the next page.

Note

Auto-Maskin continuously upgrades its products and reserves the right to make changes and improvements without prior notice. Please check at auto-maskin.com for new firmware.

6. Type the IP address of the S-ONE Main Panel here:

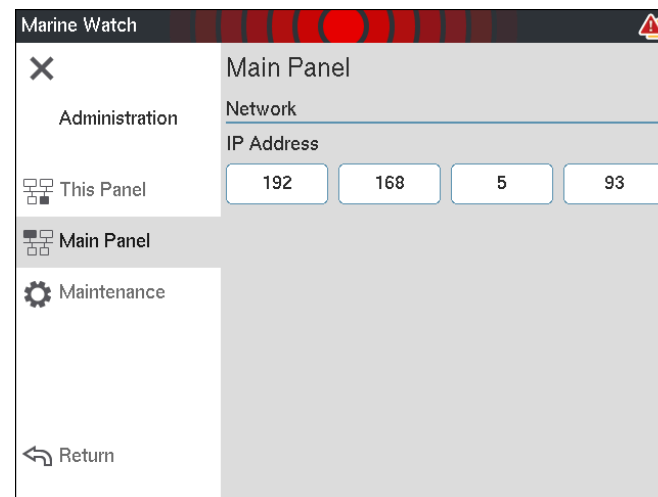

Note! To find the IP address of the S-ONE Alarm Panel

On the **S-ONE Alarm Panel** (selected as type Main Panel), select **Menu > Administration**. Note the IP address in the section **This Panel**, and type in above.

Several S-ACE Annunciator Panels

If more than one S-ACE Annunciator Panel is installed in the network, then make sure each has a unique IP address.

1. On the S-ACE Annunciator Panel: Menu > Administration > Log In > This Panel.
2. The IP address is typically in the form 192.168.0.X, where X must be set to a unique number in the network in the range 1-250. Default is 201.

Additional Documentation

Please auto-maskin.com for additional documentation.